



# Mark V

# User Manual

Please read this manual carefully before using Alcovisor® Mark V.


Alcovisor® Mark V uses an electrochemical fuel cell to detect and measure the concentration of alcohol vapor in expired breath.

Although the Alcovisor® Mark V is extremely simple to operate, it is important that the following procedure is used each time a breath is given. Deviation from the proper procedure will not generally affect the result of a test. However, the integrity and capability of an operator, and even the legality of any resulting action, could be questioned and brought into doubt if it is found later that the operator did not follow the proper testing procedure.


## **PRETEST QUESTIONING**

Some foods and even “non-alcoholic” drinks may contain traces of alcohol, which will affect the test result through a “mouth alcohol” effect. To prevent this, wherever possible, insure that a delay of about 20 minutes has elapsed since taking anything by mouth – even medicines which may contain alcohol. Even a glass of water prior to the test will cool the mouth and dilute the saliva, temporarily reducing the amount of alcohol in the breath, and, consequently, the instrument reading. A delay of at least two minutes should take place between the time of last smoked and the test.

## STRUCTURE

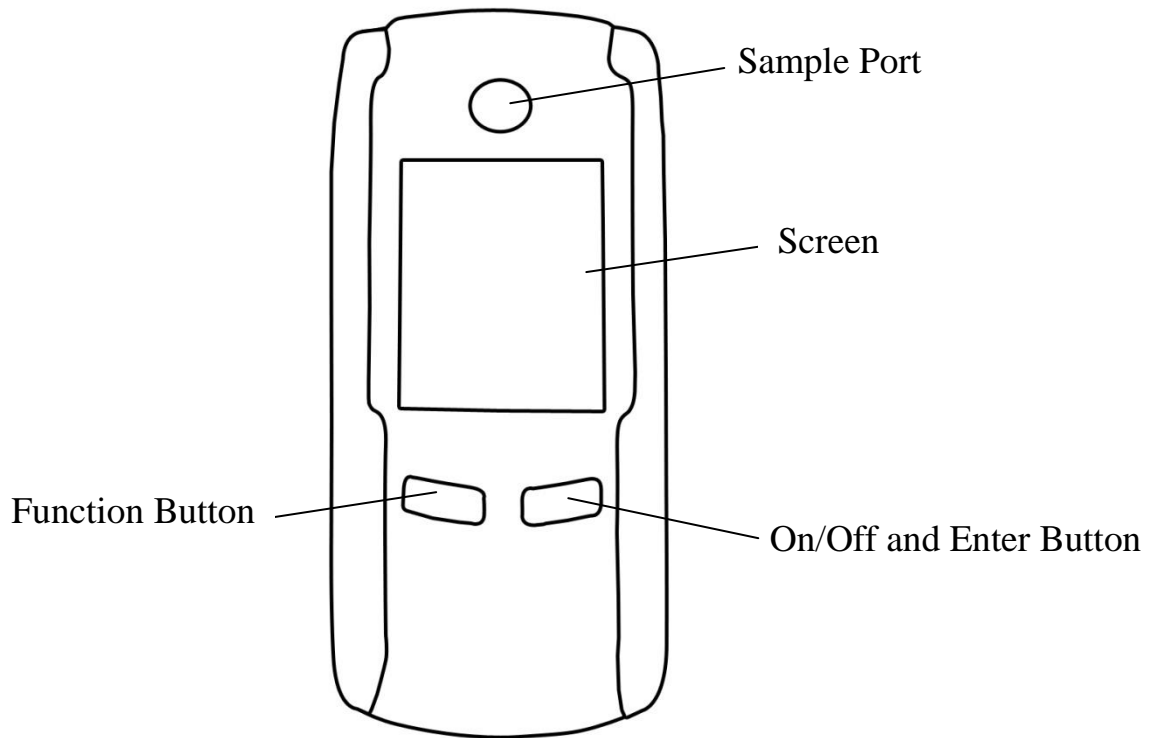

## ICON DESCRIPTION

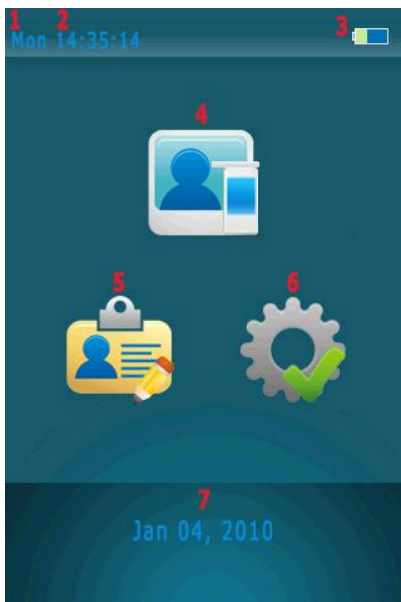

1	Weekday Indicator
2	Time Indicator
3	Battery Indicator
4	Standard Test
5	Test Records
6	Setting
7	Date Indicator



Previous Screen/Cancel



Next Screen/Confirm



Main Screen



Print





Repeat Test

# DETAILED PROCEDURE






## Standard Test

1. Attach a disposable mouthpiece onto the sample port.
2. Select the “Standard Test” icon by “Function Button ” and “Enter Button”.
3. When displays “Please Blow”, take a deep breath and blow until BEEP tone stops.
4. Test result displays on the display.
5. If printer is using, connect the printer with the device by the cable provided, switch on the printer. After test result displays, select  and the test result will be printed automatically.
6. Select  to start another test.
7. If testee did not blow within 30 seconds, tester can select “Refuse” to confirm the testee refused to do the test; or select “Test Again” to allow testee to do the test again.
8. If testee failed to give a valid breath sample, tester can select “Discontinue” to confirm; or select “Test Again” to allow testee to do the test again.
9. A passive test can be performed by select “Manual” during the testee is blowing.



## Test Record

1. 2,000 test records can be stored.
2. Use  or  to move to the previous or next record.
3. For printing an individual test record, select the test record which needs to be printed, connect the printer with the device by the cable provided, switch on the printer, select  and the test result will be printed automatically.




## Setting


### 1. Date & Time

- i. Set correct Date and Time.
- ii. Select “Update” to confirm.

### 2. Auto Off

- i. Select time limit to turn off the device automatically.
- ii. Select  to confirm

### 3. Print

- i. Select “Auto Print” to print the result automatically after each test.
- ii. Select number of printout copies needed.
- iii. Select  to confirm.
- iv. If last calibration date needs to be shown on the printout, select “Cal.”.

### 4. Cali

- i. When the screen displays “Calibration Needed”, send the device for calibration.
- ii. A password is needed for calibration to ensure calibration is performed by eligible persons.
- iii. Please refer to Calibration Instruction.

### 5. Advanced Setting

- i. Only legitimated persons are allowed for advanced setting.
- ii. A Password is needed.
- iii. Please refer to Advanced Setting Instruction.